



These unscrew at the nib to expose the ink cartridge. Remove the empty and replace with a new one by firmly pressing the nipple end of the replacement cartridge onto the "pin" that is inside. This will puncture the cartridge so that ink can flow. To help get the ink started, you may need to gently squeeze the cartridge until a drop of ink appears at the tip of the nib. If after gently squeezing no ink appears, the point may be clogged. You may clean the nib by simply holding it under cold running water. Wipe off any excess ink and replace the point. PLEASE NOTE! You MUST use the "universal" (also known as an "international") cartridge! If you try to use any other you risk breaking your pen! Some other brands that use this style cartridge are: Pelikan, Waterman, Montblanc, and Cartier.

Also included with your fountain pen is a cartridge adapter. This allows you to use bottled ink. Only use water soluble inks made for fountain pens. Using the converter is like using an ink cartridge that you fill with ink yourself. It is very simple to do, once you know how. First, unscrew the nib from the body of the pen, then gently push the converter into the base of the nib, just like you would with an ink cartridge. Next, twist the top of the converter counter clockwise until the piston moves all the way to the base of the nib. Place the nib of the fountain pen completely in the ink well. Twist the top of the converter clockwise with the nib still in the ink well and the ink should fill the reservoir as the piston moves back up. You may get nothing but air at first, don't worry. Just bring the piston down again and repeat the process. When you have the reservoir full of ink, wipe excess ink from the nib and replace the nib on the body of the pen. You are now ready to write.

If you damage your nib, we offer standard nib replacement services for \$10.